

零件模板配制: template_solidpart 装配的模板配制: template_designasm 钣金模板配制: template_sheetmetalpart 工程图模板配制: template_drawing

软件默认模板路径: D:\PTC\Creo 3.0\F000\Common Files\templates

材料路径: D:\PTC\Creo 3.0\F000\Common Files\text\materials-library

字体默认路径: D:\PTC\Creo 3.0\F000\Common Files\text\fonts

图框位置配制:pro_format_dir

2.图框的认识



3.工程图配制

单位: drawing_unite mm 视角: projection_type third angle 字体大小: text_height 2.5 标注箭头样式: arrow_style filled 长度: draw_arrow_length 2.5 宽度: draw_arrow_width 0.8 剖面箭头的长度: crossec_arrow_length 1.5 宽度: crossec_arrow_width 0.5 公差显示: tol_display 零件或者组件中隐藏的特征: ignore_model_layer_status no 创建视图的显示状况: model_display_for_new_views 设置默认字体: default_font

工程图的所有配制都配制完了之后,一定要保存到你所要的文件夹里面, 再配制工程图配制文件的路径

drawing_setup_file 浏览到我们保存的工程图的配制文件夹

CREO工程图导出的比例问题怎么解决:

dxf_out_drawing_scale yes dxf_out_scale_views yes

4.工程图打印设置

Use_8_plotter_pens YES Pen_table_file table_pnt PDF_USE_PENTABLE YES